

RIVETING ACCESSORIES

There are a number of different add-ons to put on your NM-11.



N-21 TOOL SET

- Remove tube rivets
- Attach tube rivets
- Attach copper rivets




TUBE RIVETS

- Made of steel
- Length is: 8, 10, 12, 14, 16, 18, 20, 22 or 24 mm
- 100 or 1000 pcs. in a package



V 30 TOOL HOLDER

- For ski boots
- Attach belt buckles (N-21 tool set also required)
- Assemble large rivets (V 28 + V 29 tools also required)

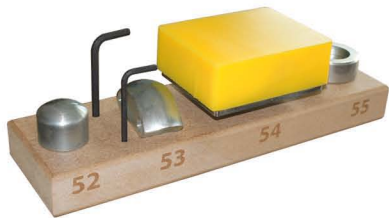

N-41 TOOL SET

- Stretch a skate
- Stretch a boot



COPPER RIVETS

- Rivets and washers
- Length is 26 or 32 mm
- 100 pcs. in a package



V 28 AND V 29 TOOLS

- For V 30 tool holder
- Assemble joint rivets (Ø25 mm)



N-E TOOL SET

- Attach eyelets



EYELETS

- Professional model
- Black outside (height 7 mm), grey inside (height 7 mm)
- 100 pcs. in a package



N-RE TOOL SET

- Remove eyelets



SHOE LACE HOOKS

- Professional model
- White or black
- 100 pcs. in a package



V 24 TOOL

- Attach shoe lace hooks (N-21 tool set also required)



ORT100 TOOL HOLDER

- For orthotics

